



1. Measure from floor up to each corner of paper template.

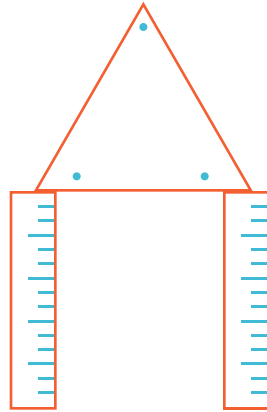


or

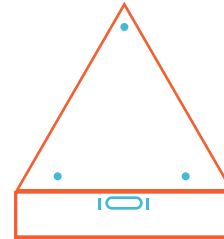


Use a level against bottom of paper template.


2. Tape paper template on wall.

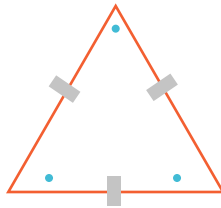

3. Hammer in and remove the included pilot nail in each hole of paper template.

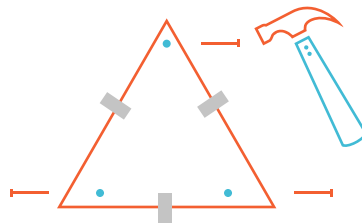


4. Remove paper template from wall.

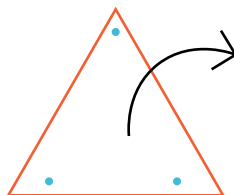

5. In top pilot hole, tap drywall anchor in slightly then screw in the rest of the way with a screwdriver.



6. Push bottom shelf pins into bottom pilot holes.

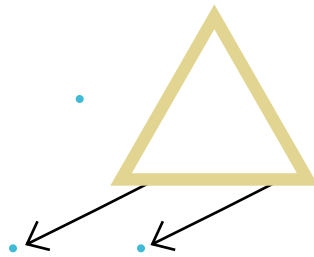

7. Screw in the 3 inch drywall screw in top hole to fasten the shelf.

